

APPLICATION NOTE

Water Analysis in a Alcohol Brine Solution Using a ClearView® db Photometer

Purpose

Measurement of water in a multiple alcohol and brine solution with our GUIDED WAVE™ ClearView® db Photometer.

Experimental

A fiber optic NIR spectrometer and two low-OH optical fiber cables were used to obtain spectra of the samples shown in Table 1. The spectra in Figure 1, was obtained with a 5 mm cuvette at 30 °C. Near-infrared (NIR) spectra are rich in chemical information. These spectra are complex with overlapping peaks from water and alcohols.

Sample	Water	Methanol	Isopropanol	NaCl (wt%)
1	37.9	51.2	10.9	4.12
2	28.8	63.2	8.0	0.36
3	34.2	44.2	21.6	4.83
4	31.7	54.4	13.9	2.02
5	41.6	38.7	19.7	3.15
6	33.5	51.7	14.8	0.95
7	39.6	42.8	17.6	2.66

Table 1

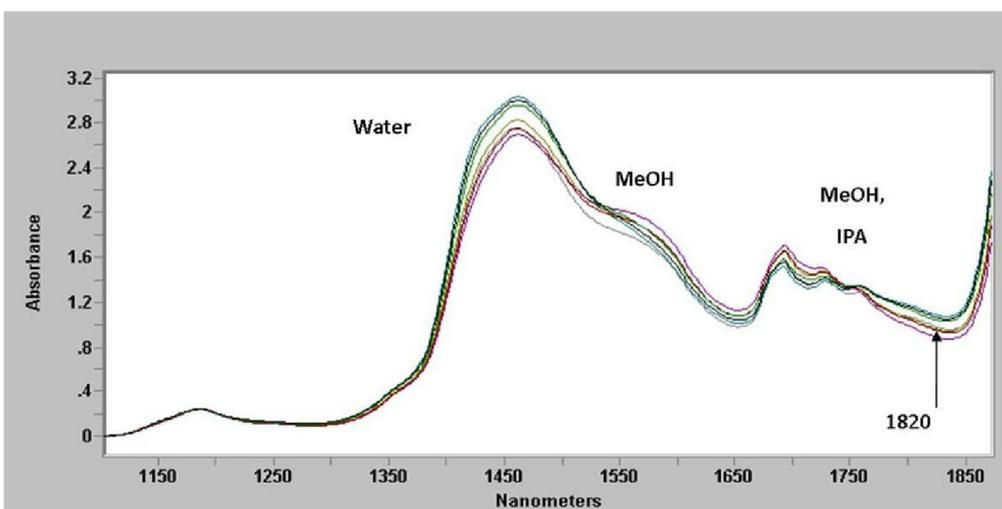


Figure 1

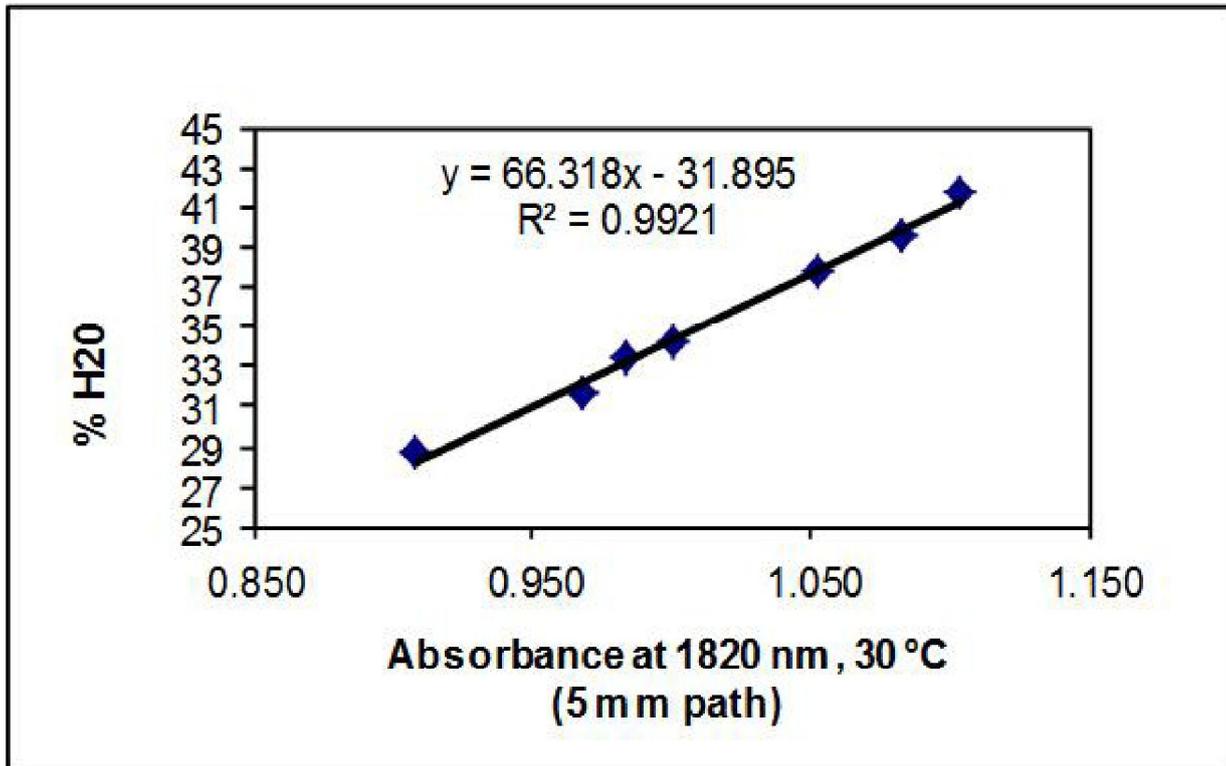


Figure 2

Results

A careful analysis of the spectra reveals that a single wavelength at 1820 nm measures water with minimal interferences from methanol and isopropanol (see Figure 2).

This wavelength is sensitive to water because it lies between the O-H peak from water at 1440 nm and the intense H-O-H peak near 1930 nm. It is, however, at a longer wavelength than the nearby alcohol peaks. It is also much less intense than the main water peak at 1440 nm, thereby allowing a probe to be used with a longer optical path, such as 5 mm, for better sensitivity.

Lastly, an added benefit in using this longer wavelength for water is its low sensitivity to sample temperature changes. Variation of ± 5 °C changes the predicted water content by less than 0.7% (without correcting for temperature). ClearView db can measure the sample temperature input from an RTD and make this correction, if needed.

Conclusion

These results indicate that a ClearView db fiber optic filter photometer with an analyzing wavelength of 1820 nm and a reference wavelength near 1050 nm can analyze water in the presence of alcohols and salt. For full product specifications and system information visit the Process Insights website.

GAIN REAL-TIME INSIGHT INTO YOUR PROCESS

Process Insights manufactures and delivers premium sensors, monitors, detectors, analyzers, instrumentation, and software that are mission-critical to keep your operations, personnel, and the environment safe – every day across the globe.

Get the most reliable, precision analytical technologies available on the market today. We will work to match your needs and budget, and provide the optimal, and most stable process analysis solution for your application.

CENTERS OF EXCELLENCE | PROVIDING PROVEN SOLUTIONS

Process Insights is committed to solving our customers' most complex analytical, process, and measurement challenges everyday.

Process Insights – The Americas

4140 World Houston Parkway Suite 180, Houston, TX 77032, USA +1 713 947 9591

Process Insights – EMEA

ATRICOM, Lyoner Strasse 15, 60528 Frankfurt, Germany +49 69 20436910

Process Insights – APAC

Wujiang Economic and Technology, Development Zone, No. 258 Yi He Road, 215200 Suzhou, Jiangsu Province, China +86 400 086 0106

For a complete range of products, applications, systems, and service options, please contact us at: info@process-insights.com

For a complete list of sales & manufacturing sites, please visit: <https://www.process-insights.com/about-us/locations/>

COSA Xentaur, Tiger Optics, Extrel, Alpha Omega Instruments, ATOM Instrument, MBW Calibration, MGA, Guided Wave, ANALECT and LAR TOC Leader are trademarks of Process Insights, Inc.



REVOLUTIONIZING MEASUREMENT

EVERYWHERE